











What to do if...
What to do if...

	A tire punctures	P. 741	If you have a flat tire
	The engine does not start	P. 750	If the engine will not start
		P. 120	Engine immobilizer system
		P. 759	If the battery is discharged
	The shift lever cannot be moved out	P. 752	If the shift lever cannot be shifted from "P"
	The engine coolant temperature gauge enters the red zone	P. 762	If your vehicle overheats
	Steam can be seen coming from under the hood		
	The key is lost	P. 39	If you lose your keys
	The battery runs out	P. 759	If the battery is discharged
	The doors cannot be locked	P. 58	Doors
	The horn begins to sound	P. 122	Alarm
	The vehicle is stuck in mud or sand	P. 765	If the vehicle becomes stuck



A warning light or indicator light comes on

P. 727

If a warning light turns on or a warning buzzer sounds...



■ Warning lights



Brake system warning light

or



P. 727



Malfunction indicator lamp



P. 728



"ABS" warning light

or



P. 728



Driver's seat belt reminder light

P. 731



Front passenger's seat belt reminder light

P. 731



Brake system warning light

P. 728



Master warning light

P. 731



Low fuel level warning light

P. 731



Electric power steering system warning light

P. 728



SRS warning light

P. 728



Slip indicator

P. 728



Open door warning light

P. 731



Tire pressure warning light

P. 731



Charging system warning light

P. 727



Pre-collision system warning light*

P. 728



Cruise control indicator*

P. 728



"AFS OFF" indicator*

P. 728



Automatic High Beam indicator light*

P. 728

*: The light flashes to indicate a malfunction.